
AUTO / MANUAL PANEL OPERATION

Please read "PREPARING TO LEVEL THE RECREATIONAL VEHICLE" before operating the levelers.

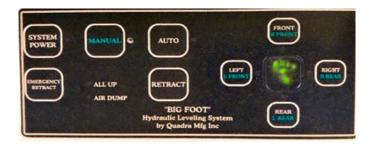

FIVE EASY STEPS:

- 1. Turn panel/system on and let system run through its diagnostic mode. Lights will flash clockwise around the green foot.
- 2. When the lights stop flashing, it's time to choose your function (MANUAL or **AUTOMATIC**). If choosing MANUAL, push button and hold until light comes on. For **AUTOMATIC**, push once and release.
- 3. When in the MANUAL mode, each leveler may be operated individually. FRONT operates right front. RIGHT operates right rear. REAR operates left rear. LEFT operates left front. When using this feature it is important to level the coach by using two levelers at a time or together. For example, right front and right rear.
- 4. When using the **AUTOMATIC** feature, simply push the **AUTO** button and then let the system operate itself. It is important at this time that there is **NO MOVEMENT IN THE COACH**.
- 5. Retracting levelers: When in the MANUAL mode, push the RETRACT button and hold until desired levelers are retracted. When in the **AUTO** mode, simply push the **RETRACT** button one time.

NOTICE

Unless you're familiar with leveling systems and have manually leveled an RV before, **we recommend using**the auto function to level the RV. The leveling system in this RV is routinely checked for accuracy so you
can rely on the automatic function to handle the leveling. A bubble level is included in the RV to confirm that
it's level, you'll find it affixed to the level sensor located under the drivers seat.

BASIC TROUBLESHOOTING TIPS

Auto leveling is not operating correctly:

- Verify RV's battery disconnect is ON allowing 12VDC power to flow.
- · Verify parking brake is fully engaged.
- · Low battery. Verify battery is fully charged on monitor panel. It might be necessary to charge battery.
- · Low battery. Verify sufficient water level in battery.
- Insufficient power. Connect to shore power if possible.
- Verify 12VDC fuse in power center is NOT blown.
- · Verify remote mini breaker has NOT tripped.